



◆ Model number

SGP300 **A** **17** **A** **2** **H** **1** - **L** **XXX**


① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨

- | | | | |
|---|---|--|--|
| ① Series number
SGP300 series | ④ Position of ports
A : side ports
D : rear ports | ⑥ Mounting
H : horizontal 2 bolts | ⑧ Rotation viewing from shaft end
L = counterclockwise
R = clockwise |
| ② Mounting spigot diameter
- : $\phi 82_{-0.030}^{+0.030}$
A : $\phi 82.55_{-0.05}^{+0.05}$ | ⑤ Port configuration
1 : flange port
2 : G screw thread | ⑦ Shaft end
1 : SAE Spline 10 teeth | ⑨ Code number in 3 figures |
| ③ Size | | | |

◆ Specifications

Size	Displacement		Rated pressure			Max. peak pressure			Speed min ⁻¹		Inlet pressure	Mass	
	cm ³	in ³	MPa	bar	psi	MPa	bar	psi	MIN.	MAX.		kg	lb
10.5	10.4	0.634	25.0	250	3625	30.0	300	4350	500	3500	bar -0.20~ 1.0 MPa -0.02~ 0.1 psi -2.9 ~14.5	3.8	8.36
12	12.2	0.744										3.9	8.58
15	14.8	0.903										4.0	8.80
17	16.7	1.019										4.2	9.24
19	19.2	1.171										4.2	9.24
21	21.0	1.281					4.3	9.46					
23	22.9	1.397					4.4	9.68					
24	23.6	1.440	22.0	220	3190	27.0	250	3625					

◆ Typical assembly

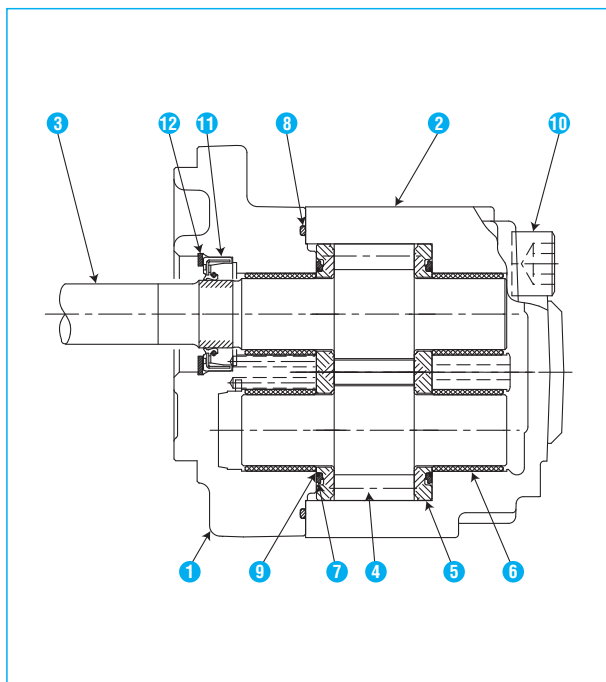


Item No.	Name	QTY	Material
①	Front cover	1	Aluminum alloy
②	Body	1	Cast iron
③	Drive gear	1	Alloy steel
④	Driven gear	1	Alloy steel
⑤	Side plate	2	Special alloy steel
⑥	Bush	4	Special alloy steel
⑦	Gasket	2	Nitrile rubber
⑧	O-ring	1	Nitrile rubber
⑨	Back-up	2	Synthetic resin
⑩	Bolt	4	Alloy steel
⑪	Oil seal	1	Nitrile rubber
⑫	Retainer ring	1	Carbon steel

NOTES : "QTY" shows the amount per one

◆ Outline dimensions

dimensions in mm

SGP300_A□□A2H□-LXXX (Side ports)

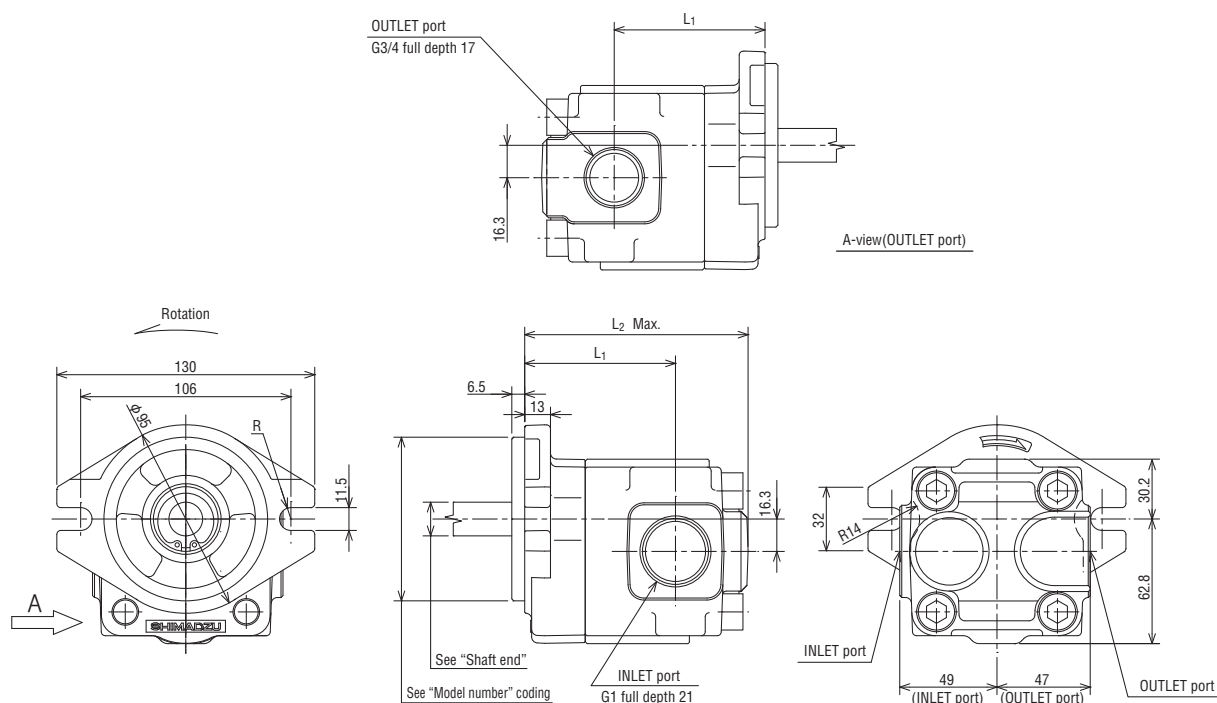


- NOTE 1. Figure shown indicated counterclockwise rotation "L" viewing from shaft end. Clockwise rotation "R" is mirror image of this.
2. Unless otherwise specified, tolerance on dimension are ± 1.0 mm.

Size	L ₁	L ₂
10.5	58.0	96.5
12	60.5	99.0
15	64.0	102.5
17	66.5	105.0
19	70.0	108.5
21	72.5	111.0
23	75.0	113.5
24	76.0	114.5

● Shaft end

SAE Spline (Some dimensions are different form SAE standard.)

SAE Spline 10 teeth

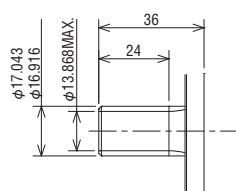

No. of tooth : 10
D.P. : 16/32
Pressure angle : 30°
Over pin dia. : 20.263~
20.193
Pin dia. : $\phi 3.048$